


Fundamentals of Automation

WHAT YOU NEED TO KNOW ABOUT GENERAL WIRING OF SENSORS

Which output type do you need: PNP or NPN? What is the difference? And what do you have to watch out for?

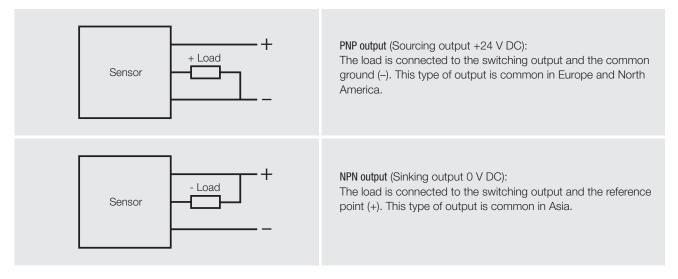

What is the difference between normally open and normally closed?

